

# Segway Xyber BAT-UPG-Package User Manual



# Contents

- 1. List of products and accessories..... 1
- 2. Assembly..... 2
- 3. Product information ..... 9
- 4. Trademarks and legal notices ..... 9
- 5. After-sales services..... 9

# 1. List of products and accessories




Battery x 1




Battery strap x 1




Dual battery discharge harness x 1

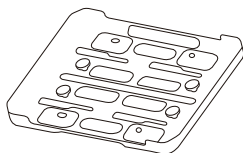

Battery base x 1

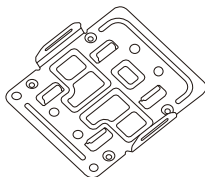

Battery fixing plate x 1

 

Dual charging expansion cable x 1



Hexagon socket countersunk  
head screw x 4




Hexagon socket button  
head screw x 4






Battery lock insert x 4

## 2. Assembly


1. Loosen the bolts and remove the left cover plate;

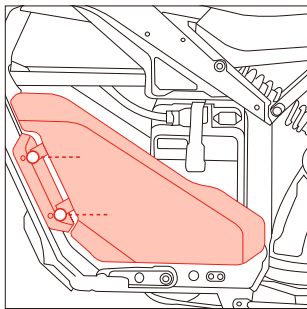


2. Loosen the battery fixing strap and remove the battery plug;

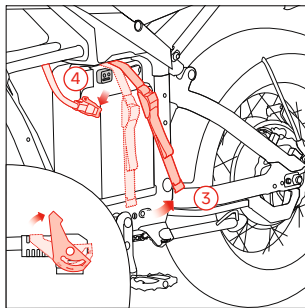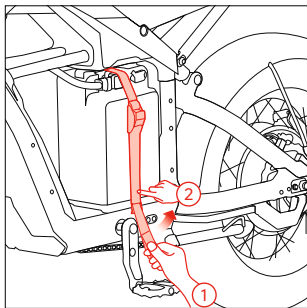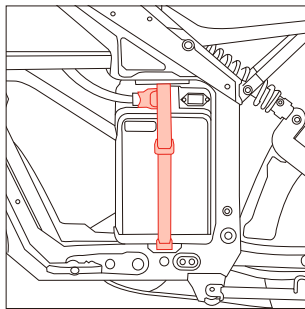


3. Turn the key, unlock the battery anti-theft lock, and remove the battery;

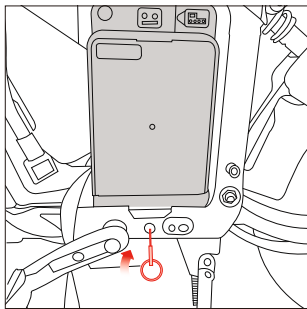


4. Loosen the 3 screws and remove the decorating plate;

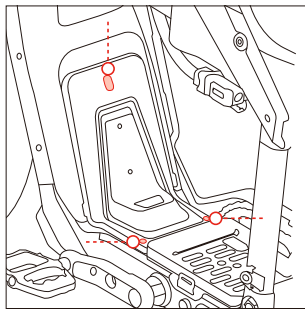


5. Remove the rubber plugs on the left and right sides of the plastic part;

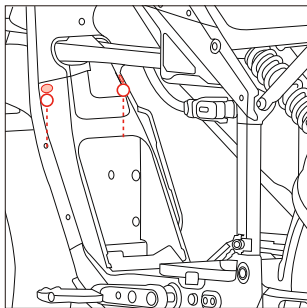


6. Loosen the 6 screws on the front panel;

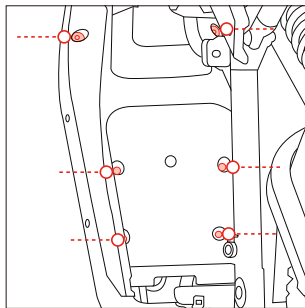


7. Remove the 2 plastic parts;

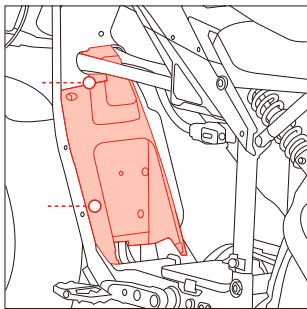


8. Remove the plastic parts on the controller;

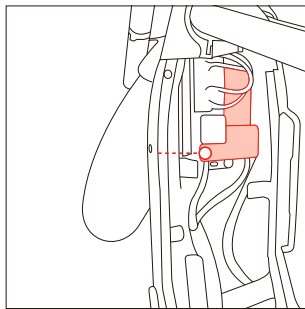


9. Loosen the screw, remove the connector, and remove the wire;

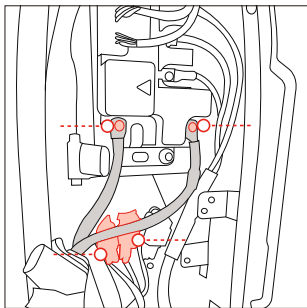


10. Fix the dual battery discharge harness with screws and connect the connectors;

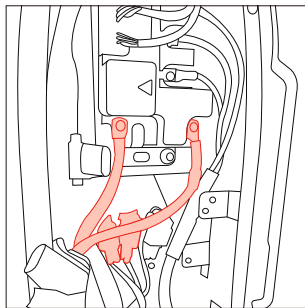


11. Fasten the plastic parts on the controller;

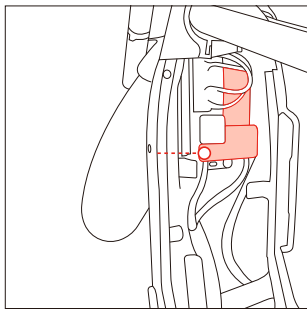


12. Arrange the dual battery discharge harness;

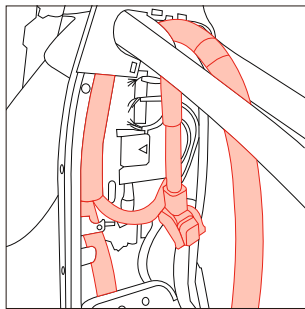


13. Install the plastic parts and fix them with screws;

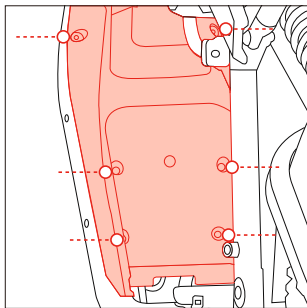


14. Fasten the plastic parts;

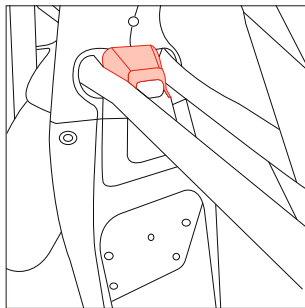


15. Install the rubber plugs on the left and right sides of the plastic part;

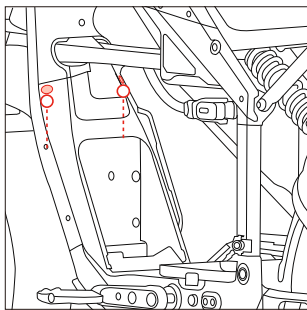


17. Take out the battery lock insert from the accessory package, and install it on the bottom of the battery;

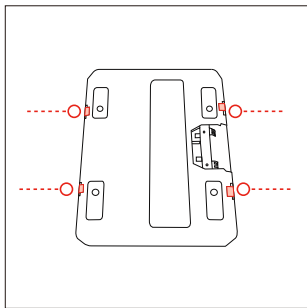

16. Remove the rubber plug on the bottom of the battery;

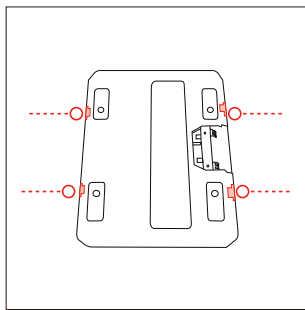


18. Install the battery base on the bottom of the battery, and fix it with the hexagon socket button head screw taken out from the accessory package;

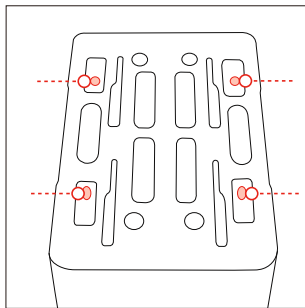





19. Install the battery fixing plate and fix it with the hexagon socket countersunk head screw taken out from the accessory package;

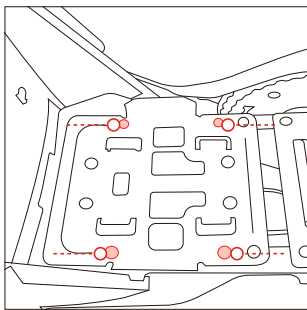


21. Install the second battery, insert the power plug and fix it with a battery strap, and turn the key to lock the battery anti-theft lock;

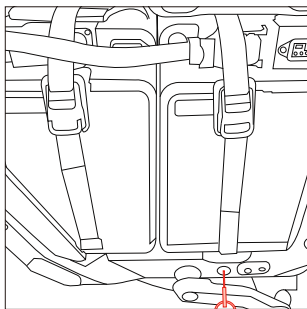


20. Install the assembled battery components, insert the power plug and fix it with a battery strap;

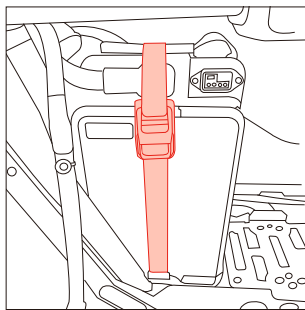


22. Insert the fixing nail of the long harness into the fixing hole on the frame;

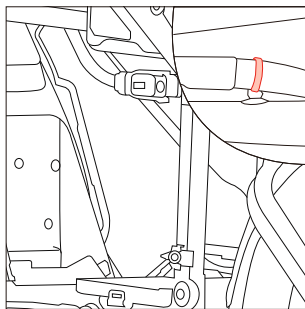

23. Install the left cover plate, fix it with screws, and put the cover plate in place;

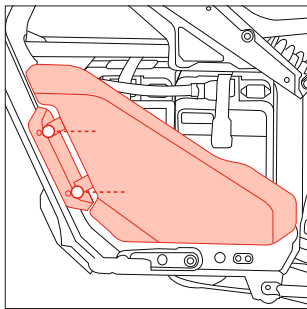

24. Use a dual charging extension cable to charge the two batteries.

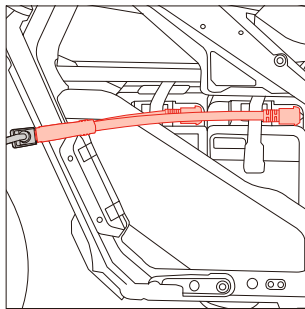

### 3. Product information

Product information	Segway Xyber BAT-UPG-Package
Packaging size	314×259×394mm
Packaging gross weight	13.5kg
Colour	Black

### 4. Trademark statement

Segway Xyber and the Segway logo featuring a flying man are trademarks of Segway Inc. Other trademarks mentioned herein are trademarks of their respective owners.

Due to product updates, the product described in this user manual may differ from the product you actually purchased in color, appearance, etc. Please refer to the actual product.

© 2024 Segway-Ninebot All rights reserved.

### 5. After-sales services

Product name	Warranty period	Start date	Returns and exchanges	Warranty coverage
Accessory package	1 month	Online: delivery date Offline: purchase date	Online: 7-day unconditional returns and 30-day exchanges; Offline: 30-day exchanges; (For promotions or other specified activities, the instructions, if any, should be followed)	Deformation, breakage, and open welding due to non-human causes.

Return and exchange requirements:

1. Intact and complete packaging: The product and packaging remain in the same condition as sold, and the accessories, gifts, etc. are intact and complete;
2. Complete documents: The receipt, user manual, bills, etc. are intact and complete;
3. Shipping fee description: For online purchases, consumers are responsible for postage for 7-day unconditional returns.

Non-guarantee clauses:

1. The packaging of the returned product is damaged, the documents are incomplete, the product does not match the purchase information, etc.;
2. The product is beyond the warranty period or scope;
3. The damage is caused by maintenance, collision, abuse, incorrect installation, etc. without the permission of designated authorized service outlet;
4. The damage is caused by human factors such as exposure to the sun, chemical corrosion, fire and smoke, water immersion, scratches from hard objects, and modification.





